

We recommend checking during installation whether the unit is live before and after disconnecting the disconnecter.

The unit must be connected directly to the battery, before the (+) DISCONNECTOR.

