

Reader **RF SL032B** connect as well.
PWR_ADJ set to 3.3V!

